

Buttons		Scenario	Desired Outcome - Software Interpretation	Desired Outcome - Stander Interpretation	Actual Outcome - Stander Movement
-	Left	Press & Hold	Direction interpreted as left	Stander moves left	Stander moves left
-	Right	Press & Hold	Direction interpreted as right	Stander moves right	Stander moves right
-	Up	Press & Hold	Direction interpreted as forward	Stander moves forward	Stander moves forward
-	Down	Press & Hold	Direction interpreted as backward	Stander moves backwards	Stander moves backwards
Left	Right	Press & Hold	Direction = none	No movement	No movement
Left	Up	Press & Hold	Direction interpreted as forward/left	Stander moves forward to the left	Stander moves forward to the left
Left	Down	Press & Hold	Direction interpreted as backward/left	Stander moves backwards to the left	Stander moves backwards to the left
Right	Up	Press & Hold	Direction interpreted as forward/right	Stander moves forward to the right	Stander moves forward to the right
Right	Down	Press & Hold	Direction interpreted as backward/right	Stander moves backwards to the right	Stander moves backwards to the right
Up	Down	Press & Hold	Direction = none	No movement	No movement
-	Left	Press	Direction interpreted as left	Stander turns left	Stander turns left
-	Right	Press	Direction interpreted as right	Stander turns right	Stander turns right
-	Up	Press	Direction interpreted as forward	Stander inches forward	Stander inches forward
-	Down	Press	Direction interpreted as backward	Stander inches backwards	Stander inches backwards
Left	Right	Press	Direction = none	No movement	No movement
Left	Up	Press	Direction interpreted as forward/left	Stander turns forward to the left	Stander turns forward to the left
Left	Down	Press	Direction interpreted as backward/left	Stander turns backwards to the left	Stander turns backwards to the left
Right	Up	Press	Direction interpreted as forward/right	Stander turns forward to the right	Stander turns forward to the right
Right	Down	Press	Direction interpreted as backward/right	Stander turns backwards to the right	Stander turns backwards to the right
Up	Down	Press	Direction = none	No movement	No movement