


## Jib Transfer System – System Removal Instructions

The only tool you will need is the allen wrench which is attached to the base



### Removal Steps:

1. Open the deck plate located in the center of the device's base

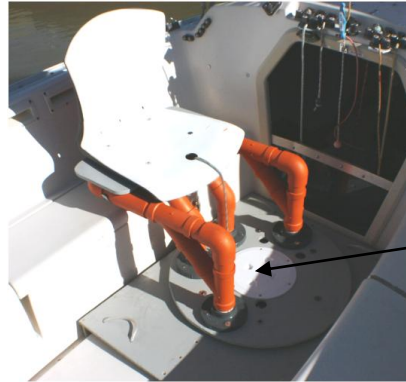

This is the deck plate that unscrews from the base


2. Unscrew the thumb screws and remove the first Aluminum rod from the securing mechanism

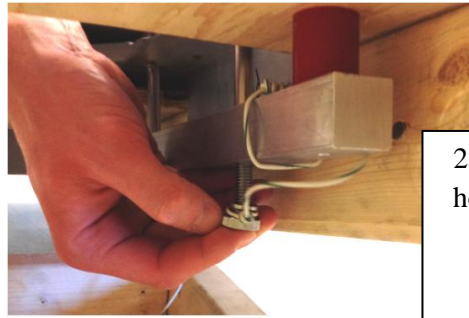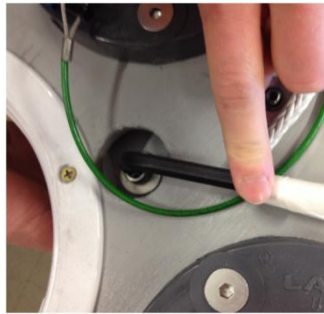

2a. Use the allen wrench to hold the bolt in place while unscrewing the thumb screws from underneath




2b. Slide the Al bar off of the bolts

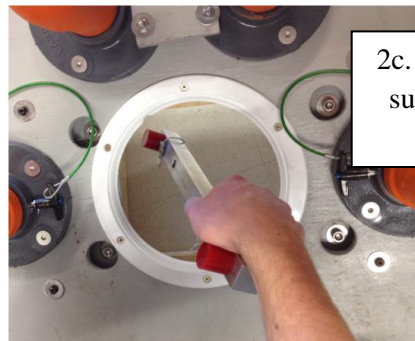


2c. Remove the Aluminum support through the deck plate opening

3. Remove the bolts and washers from the four access holes and place them back on the securing mechanism (for storage)

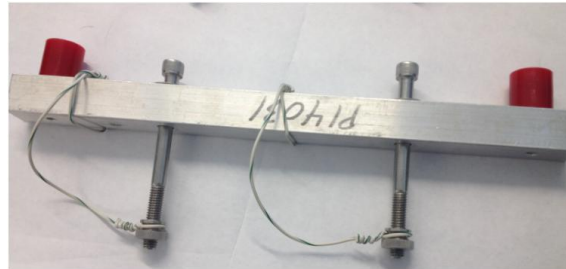

4. Unscrew the thumb screws and remove the second Aluminum rod from the securing mechanism (see pictures above)
5. Replace the deck plate in the center of the device's base
6. Using two people, lift the Jib Transfer System using the handles on the base and place the device on the dock
7. Replace the bilge port cover into the deck of the Sonar

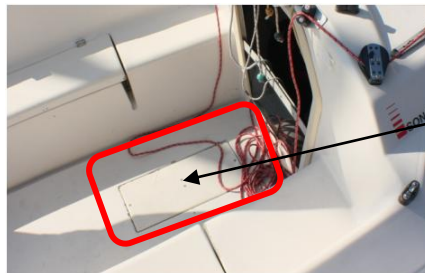

Replace bilge port cover  
on the Sonar's deck